


- |                              |                               |
|------------------------------|-------------------------------|
| 8: ATTACHMENT PEDAL          | 19: WORK TOOL OPERATING LEVER |
| 9: SIDE WINDOW               | 20: WORK TOOL OPERATING LEVER |
| 10: INSTRUMENT PANEL         | 21: LOCK LEVER                |
| 11: OPERATOR'S CABIN         | 22: MONITOR DEVICE            |
| 13: OPERATOR'S SEAT          | 23: FRONT WINDOW              |
| 14: TRAVEL OPERATING SECTION | 24: EXTERNAL CASE             |
| 15: TRAVEL LEVER             | 25: VERTICAL FRAME            |
| 16: TRAVEL LEVER             | 26: MONITOR SCREEN            |
| 17: TRAVEL PEDAL             | 27: PUSH BUTTON               |
| 18: TRAVEL PEDAL             | 30: DISPLAY SECTION           |

2/16

FIG. 2

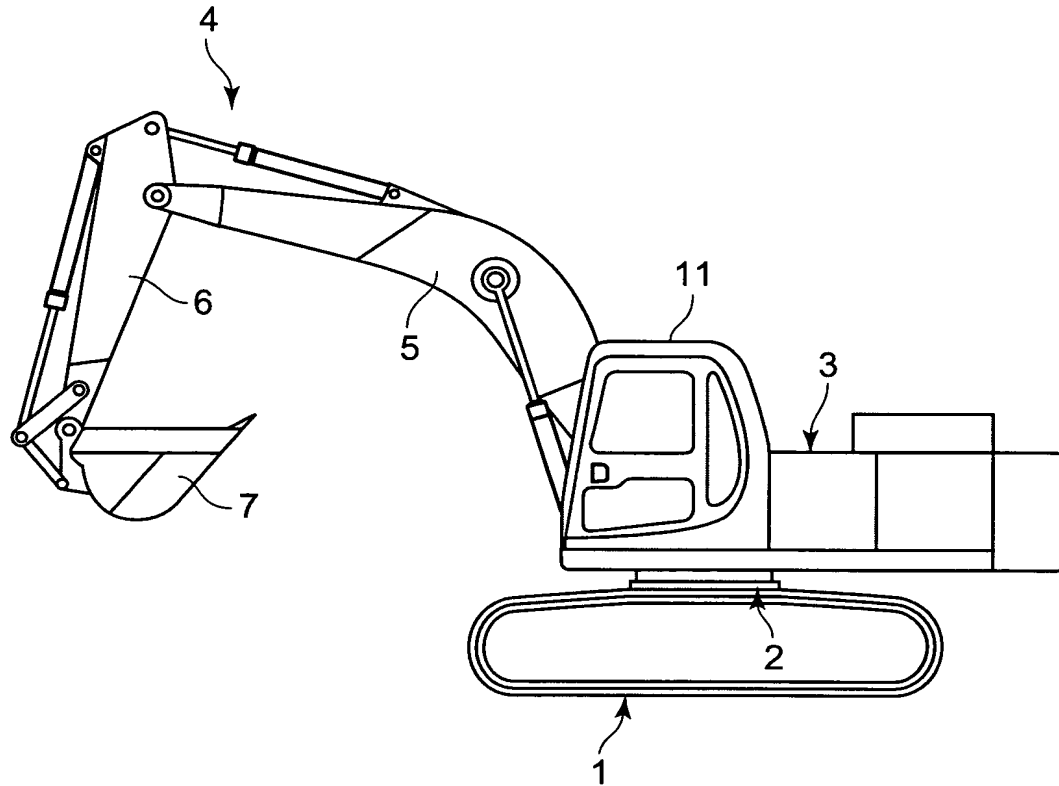


1: LOWER TRAVELING BODY  
2: ROTATION MECHANISM  
3: UPPER ROTATING BODY  
4: WORK TOOL

5: BOOM  
6: ARM  
7: BUCKET  
11: OPERATOR'S CAB

3/16

FIG. 3

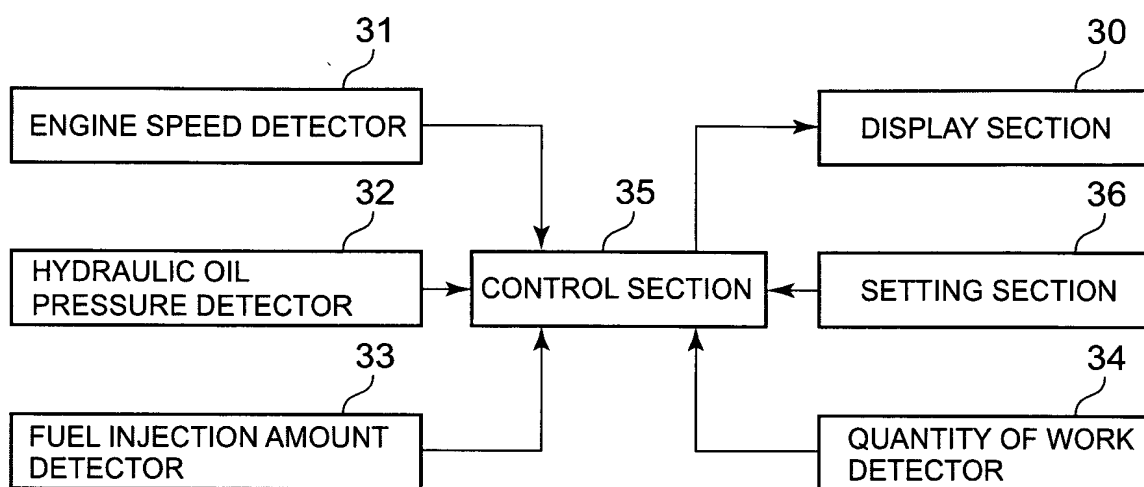

4 / 16

FIG. 4



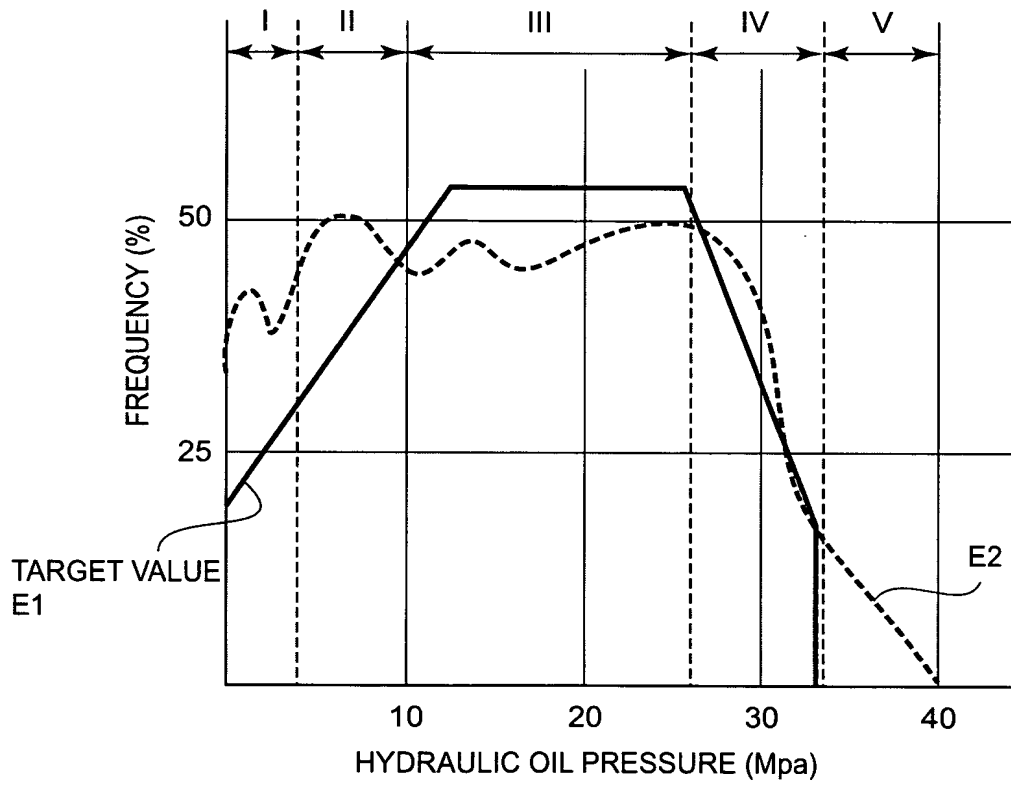


FIG. 5

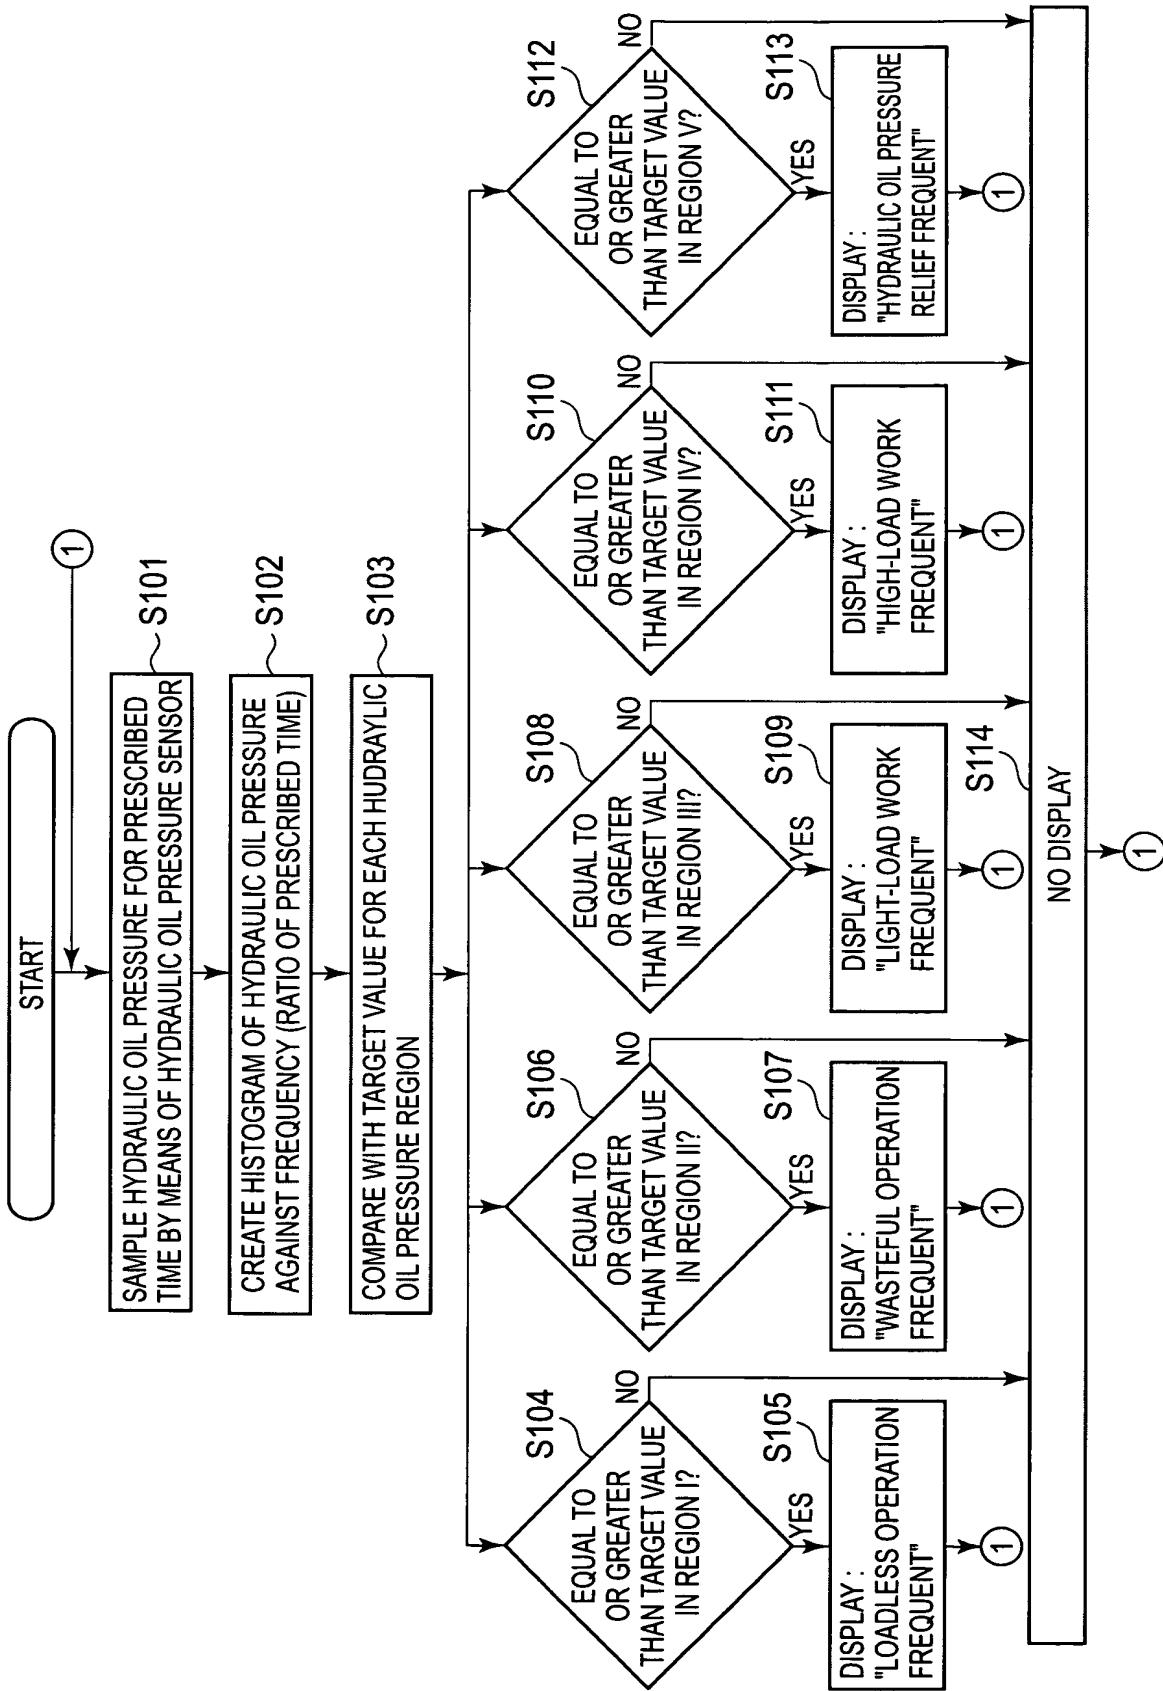

6 / 16

FIG. 6

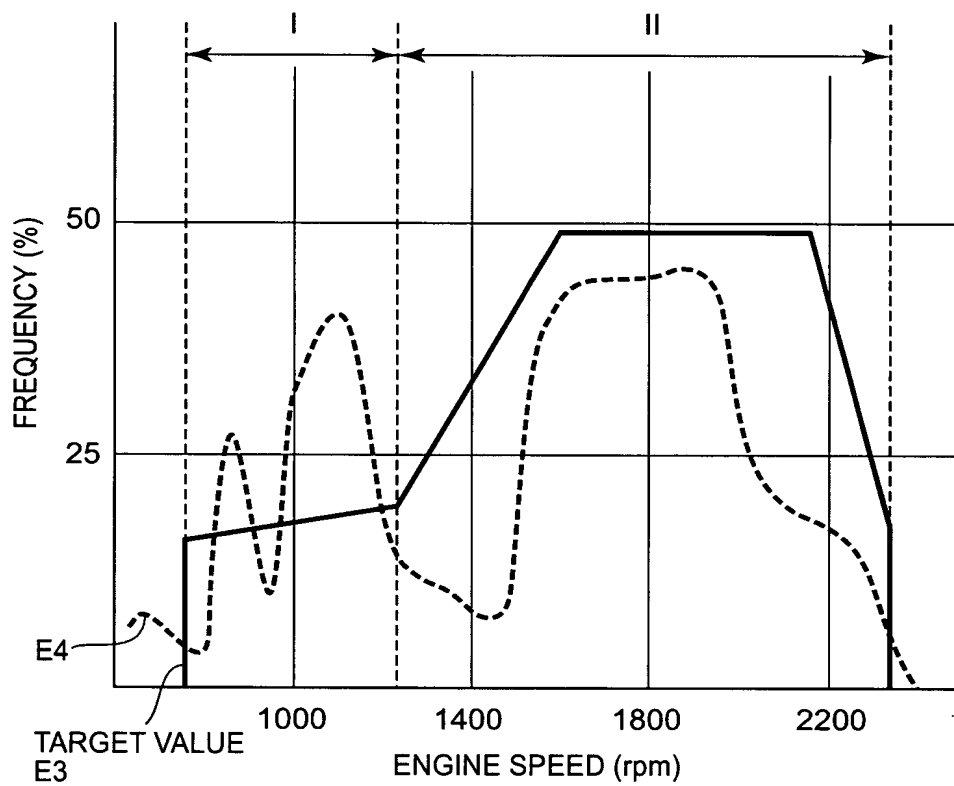

7/16

FIG. 7


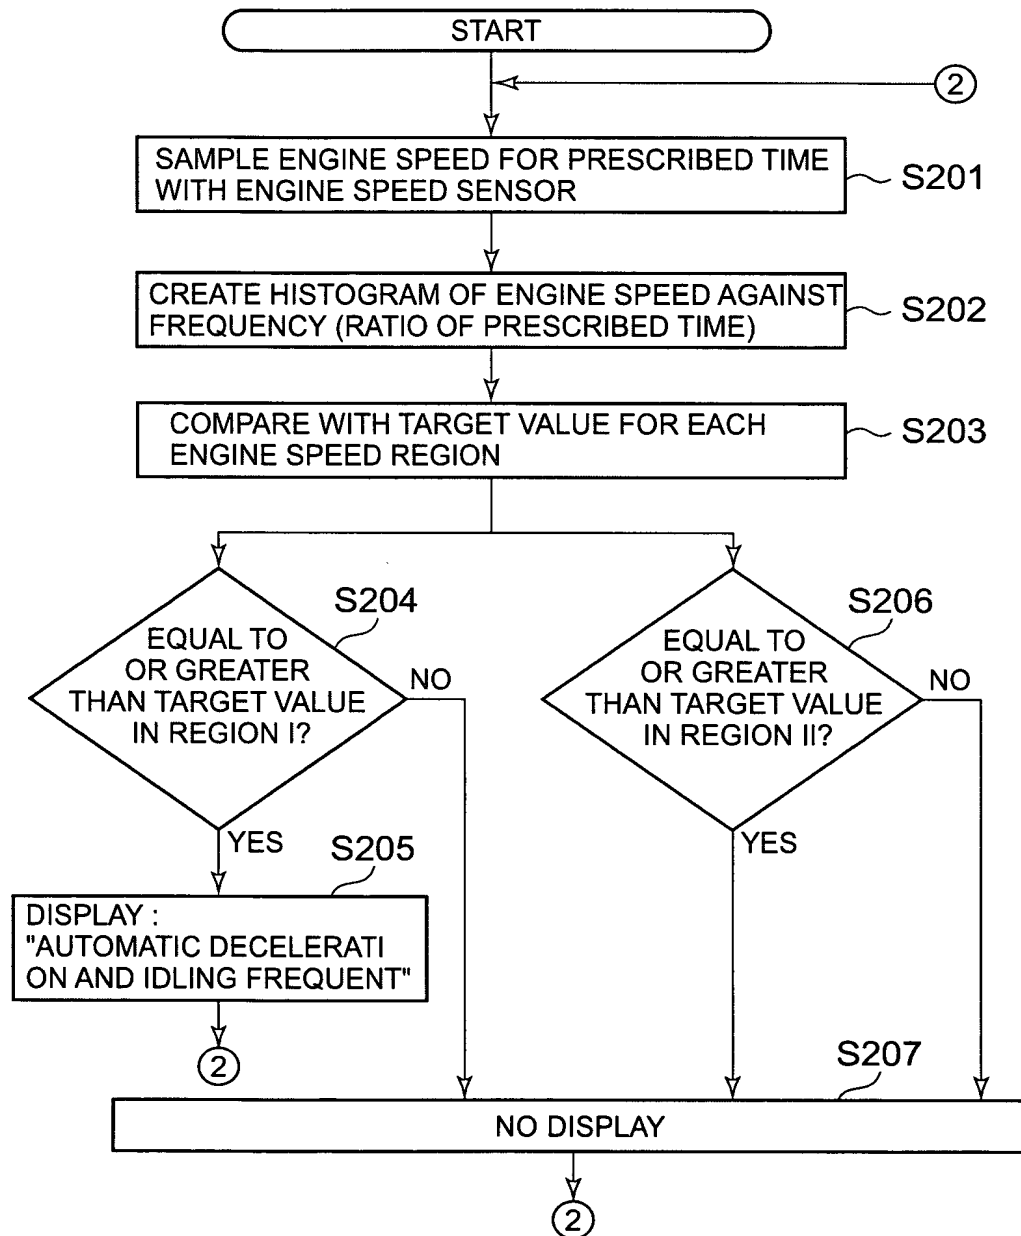



FIG. 8



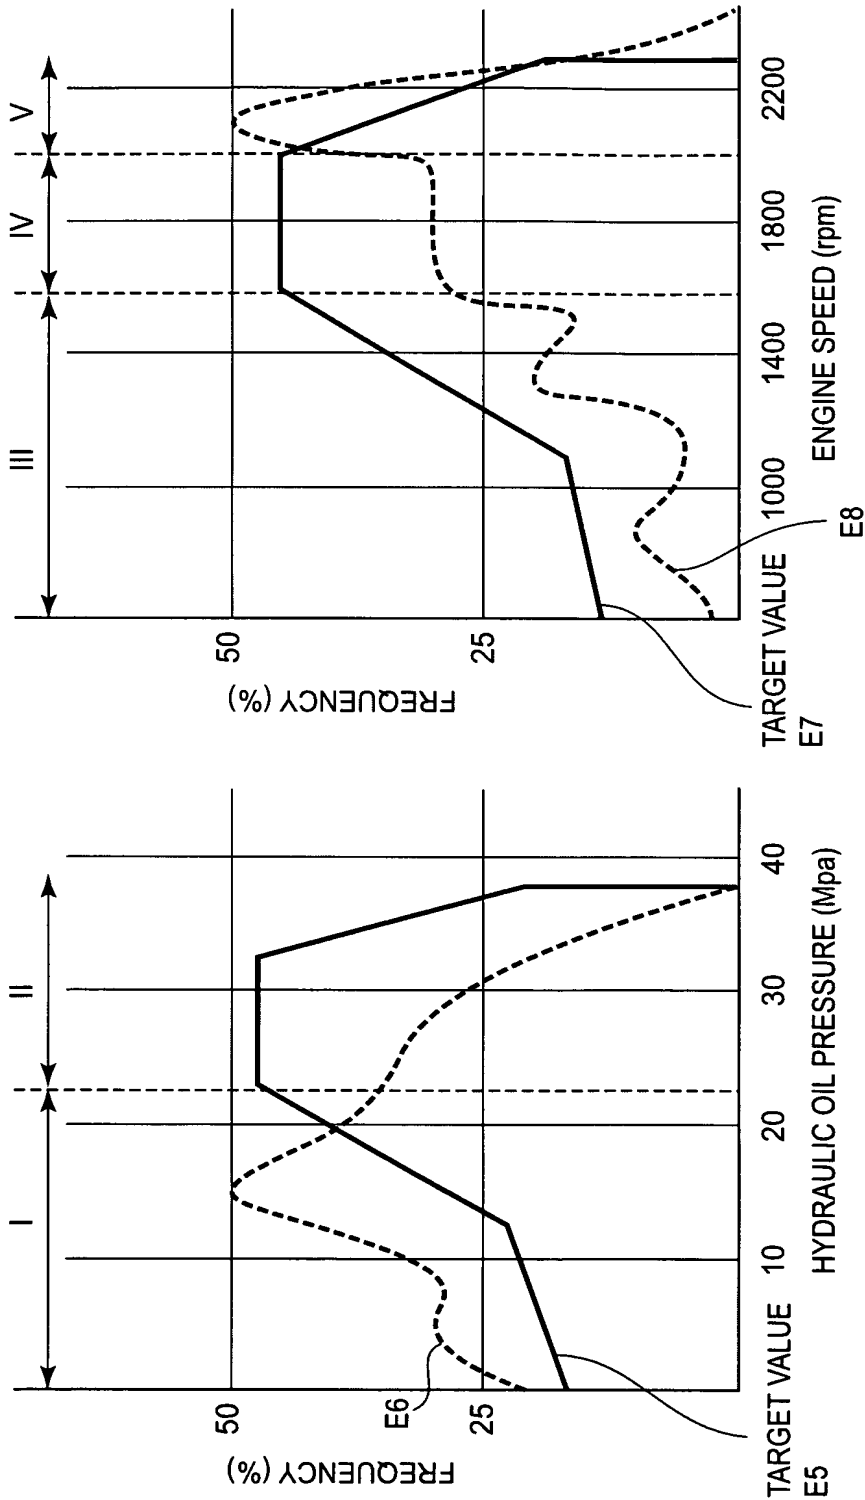

9/16

FIG. 9

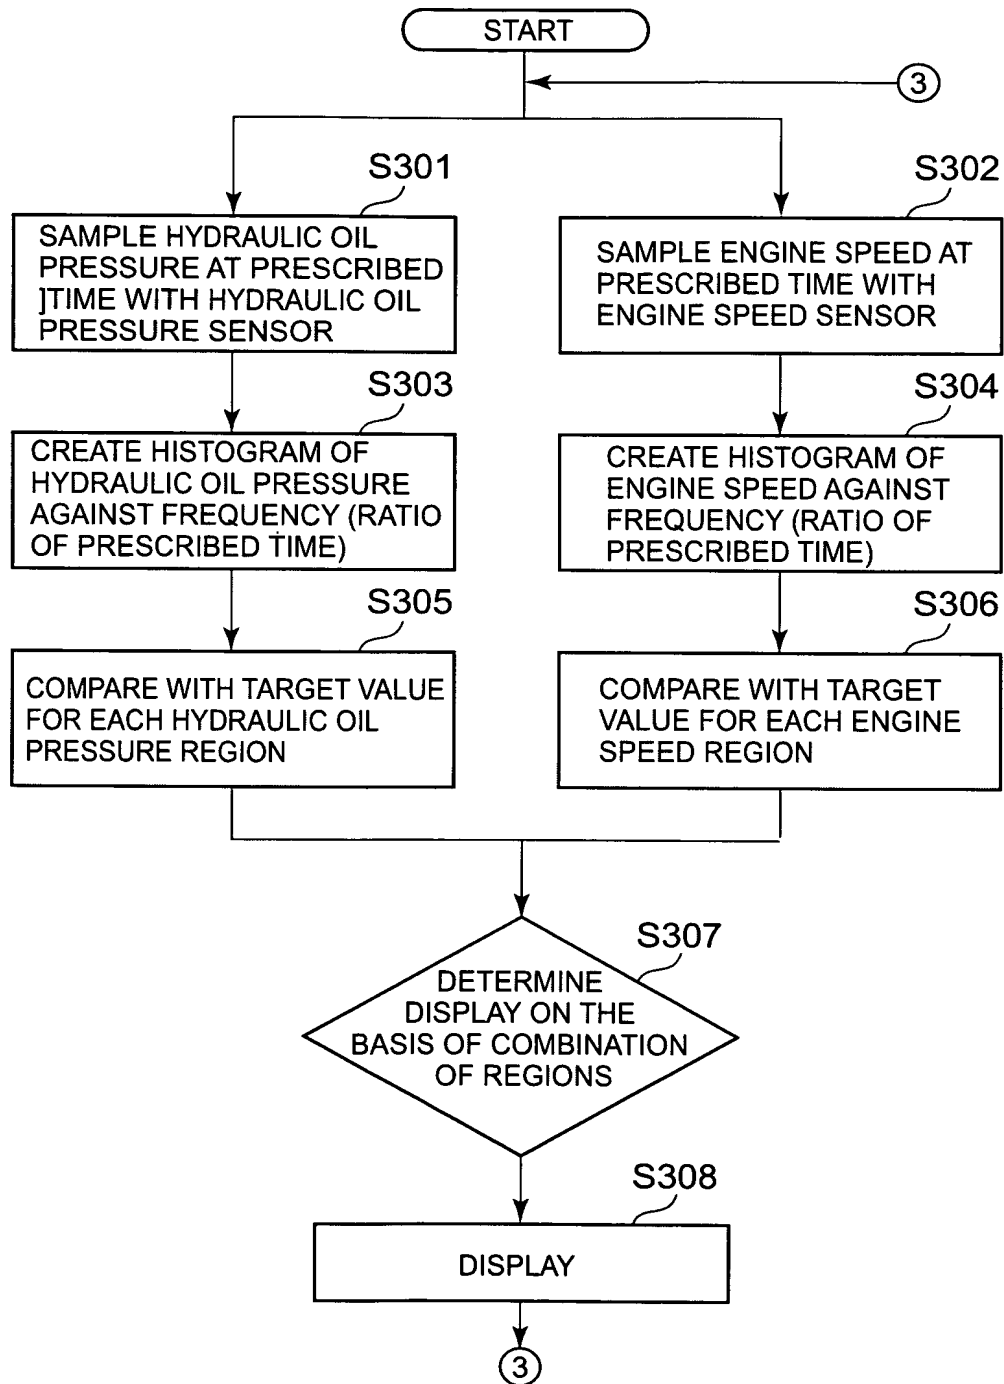


10/16

FIG. 10

HYDRAULIC OIL PRESSURE REGION	EQUAL TO OR ABOVE ESTABLISHED VALUE?	ENGINE SPEED REGION	EQUAL TO OR ABOVE ESTABLISHED VALUE?	DISPLAY	
I	YES	III	YES	"LIGHT LOAD, FREQUENT WASTE"	T101
			NO	NONE	T102
		IV	YES	"LIGHT LOAD, SUITABLE WORK"	T103
			NO	NONE	T104
		V	YES	"LIGHT LOAD, HIGH ENGINE SPEED"	T105
			NO	NONE	T106
II	YES	III	YES	"HIGH LOAD, FREQUENT WASTE"	T107
			NO	NONE	T108
		IV	YES	NONE	T109
			NO	NONE	T110
		V	YES	"HIGH LOAD, HIGH ROTATION WORK FREQUENT"	T111
			NO	NONE	T112


11/16

FIG. 11

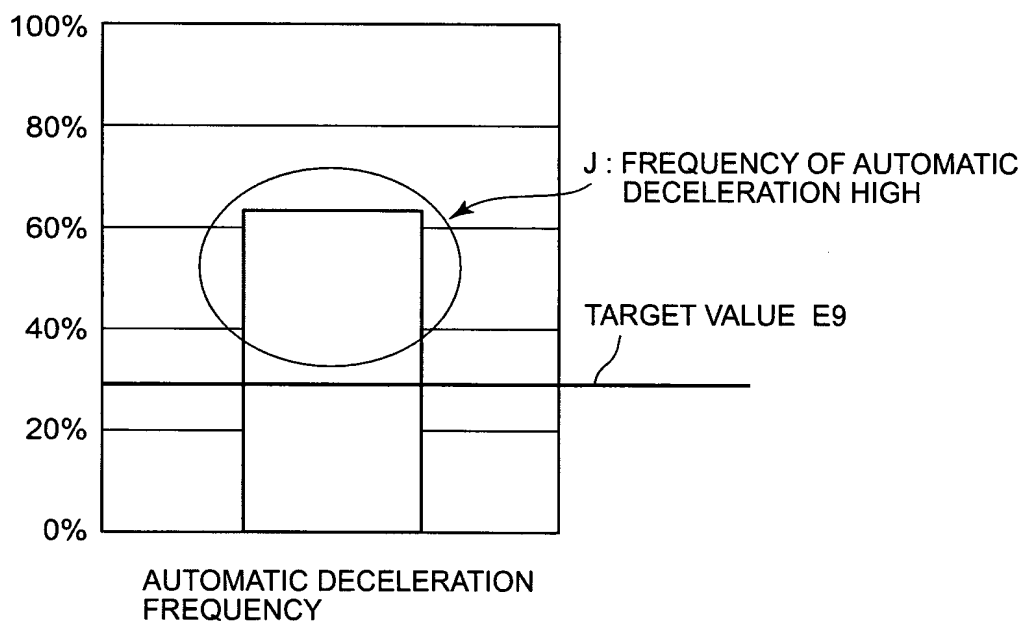


12/16

FIG. 12

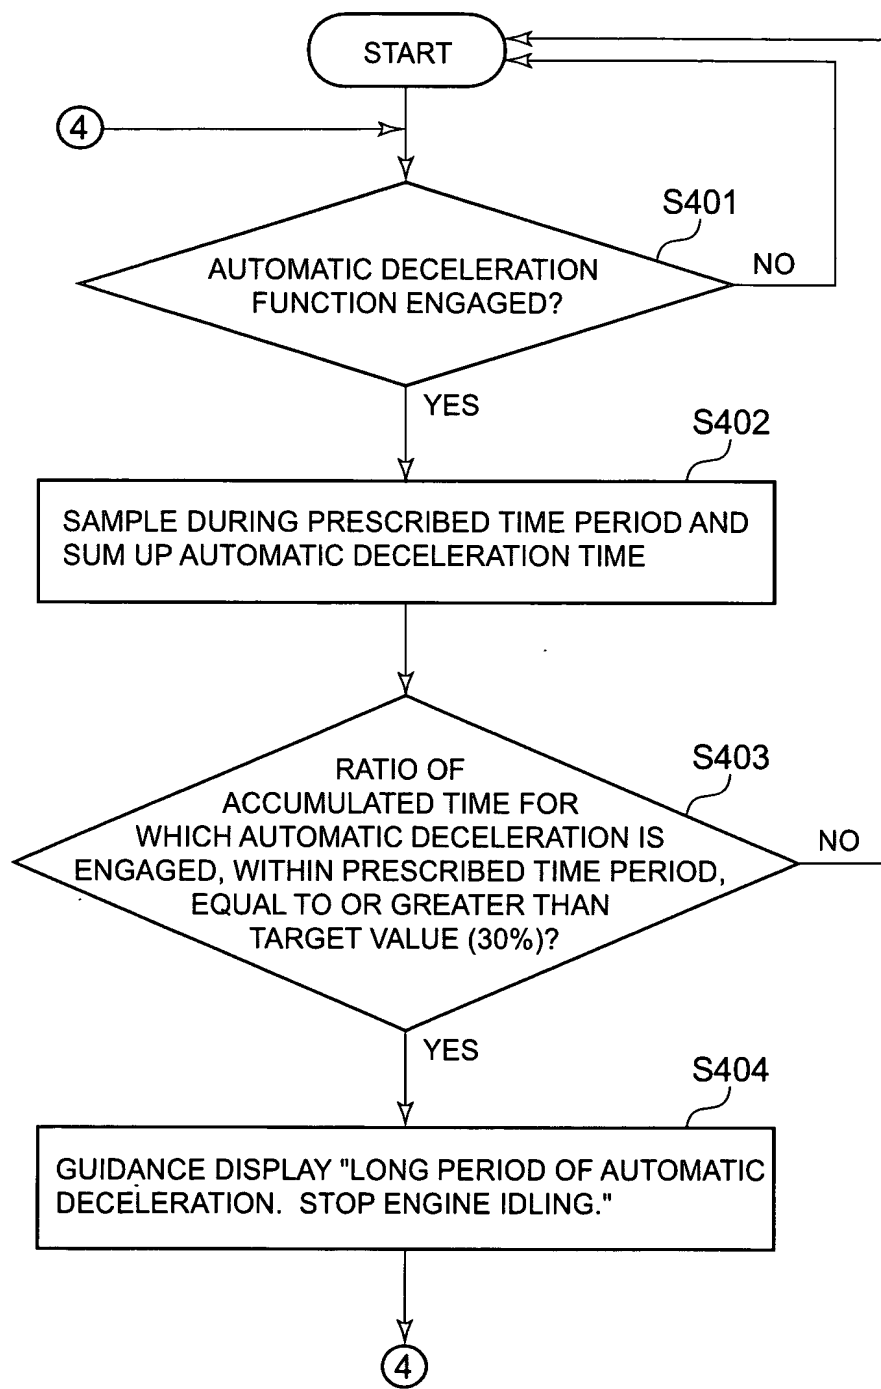


13/16

FIG. 13

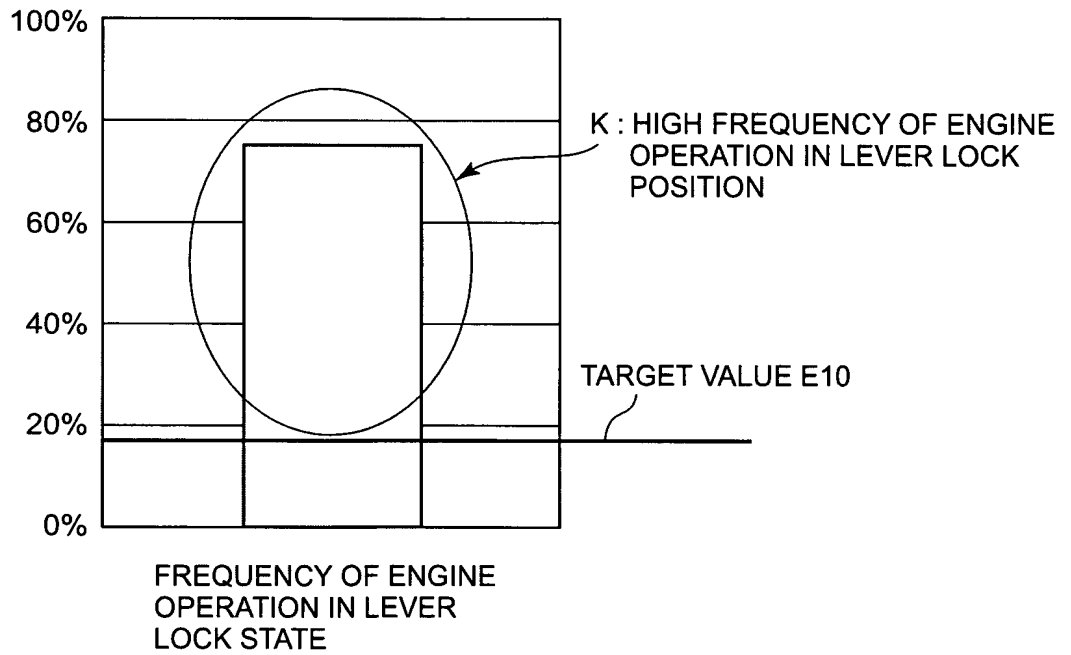

14 / 16

FIG. 14

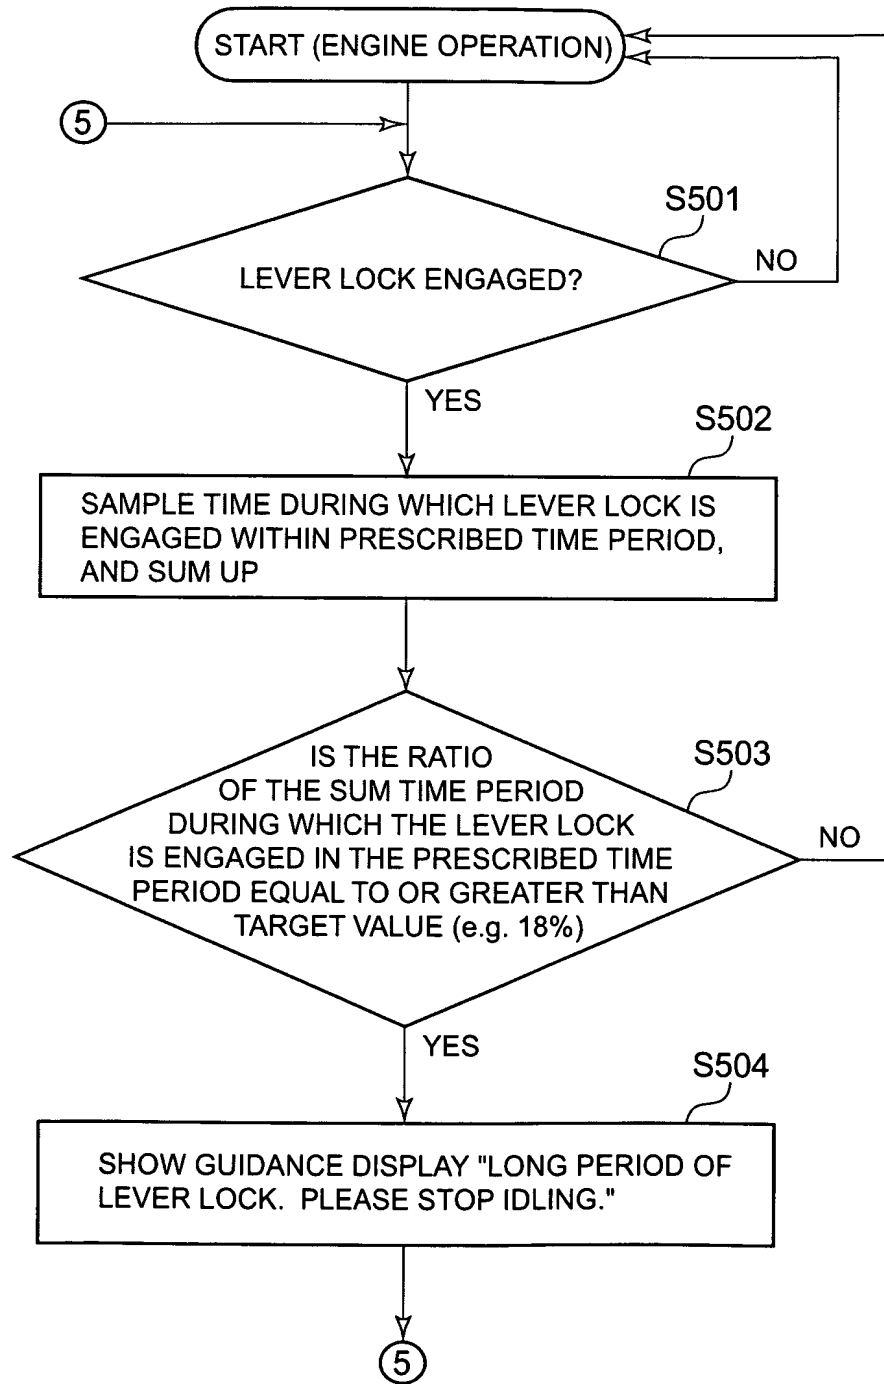

15/16

FIG. 15

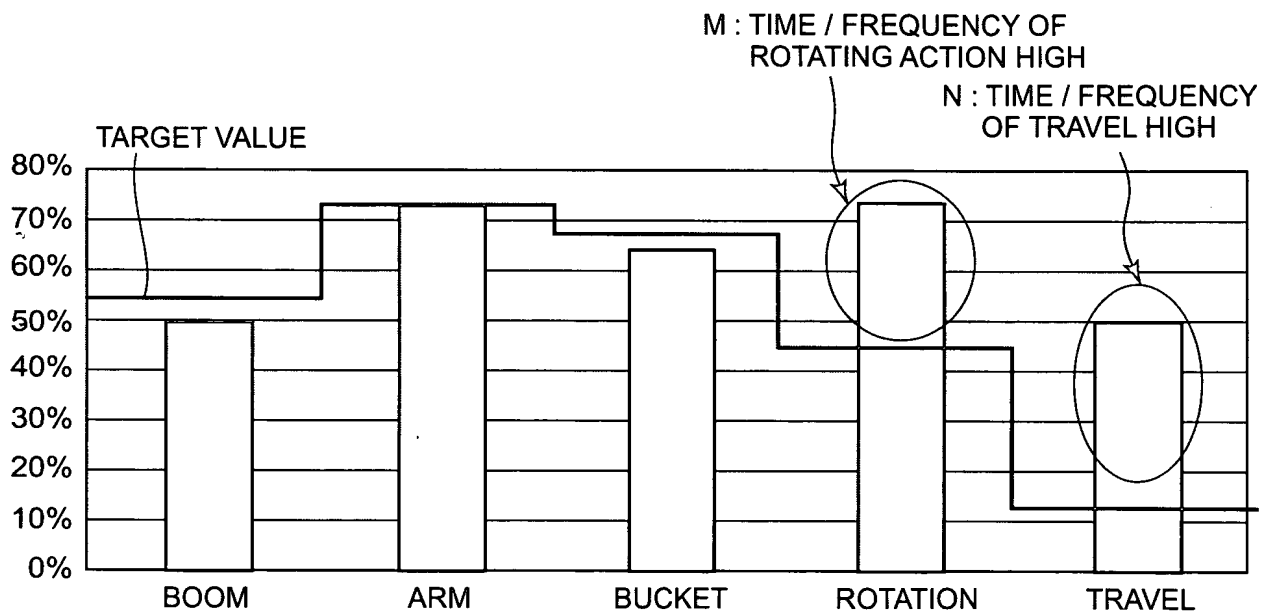


FIG. 16

